

## Quick Installation Guide Hitachi Deskstar 7K1000.C

Models: HDS721010CLA332  
HDS721075CLA332  
HDS721064CLA332  
HDS721050CLA362  
HDS721032CLA362  
HDS721025CLA382  
HDS721016CLA382



---

### System Requirements for Serial ATA

---

The following are needed to install a Serial ATA (SATA) drive to a system:

- SATA capable motherboard or controller card
- SATA hard drive
- SATA cable (1 meter or less in length)

---

### Handling precautions

---

- Set the drive down gently to prevent damage from impact or vibration.
- Do not open the ESD bag containing the drive until needed.
- Handle the drive carefully by the edges. Do not touch the exposed printed circuit board or any electronic components.
- Do not press on the top or bottom of the drive.
- Before handling the drive, discharge any static electricity from yourself and your clothing. With one hand, touch an unpainted metal surface on your computer chassis, then touch the ESD bag with the other hand. Remain in contact with the chassis and the bag for a minimum of two seconds.

---

### Quick installation procedure

---

Note: Back up all data before installing drive.

1. Turn off the computer.
2. Unplug the computer.
3. Remove the computer cover as instructed by the computer system manual.
4. Discharge static electricity (see Handling precautions).
5. Note the mounting position of existing drives and cables. If you are replacing a drive or any cable, remove it now.
6. Remove the drive from the ESD bag.
7. Record the model, the part number, and the serial number of the drive for future reference.
8. Attach the Serial ATA cable to the drive. Match key on cable to connector on drive


---

### Mounting instructions

---

Note: The mounting hole and connector locations are shown in figures 1 and 2.

1. Mount the drive securely.
2. Verify all attachments.
3. Replace the computer cover.
4. Plug in the computer.
5. Turn on the computer.
6. Verify that the hard disk is recognized by the BIOS and is reporting the full capacity of the drive. Instructions for accessing your BIOS can be found in the computer system manual or in the motherboard manufacturer documentation. If the drive is not recognized in the BIOS, set

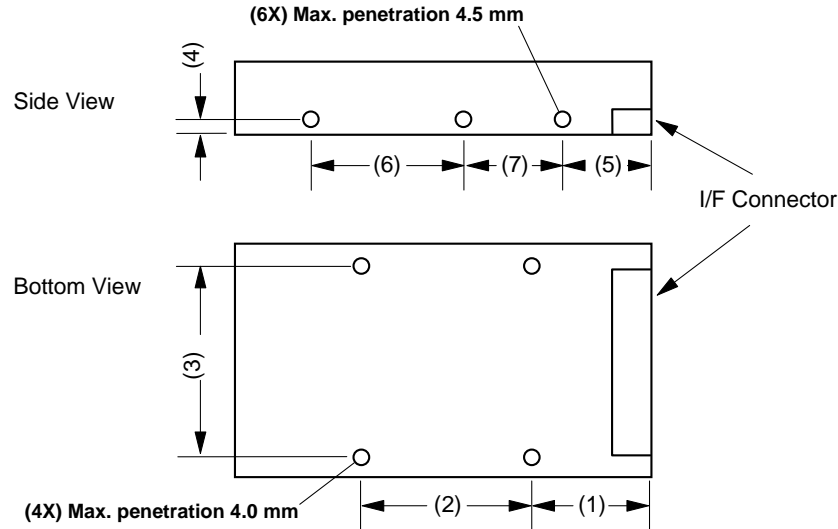

Thread	(1)	(2)	(3)	(4)	(5)	(6)	(7)
6-32UNC	41.28±0.5	44.45±0.2	95.25±0.2	6.35±0.2	28.5±0.5	60.0±0.2	41.6±0.2

Figure 1: Mounting holes locations (all dimensions are in mm)

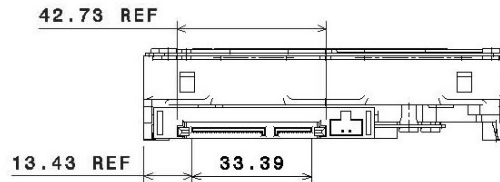


Figure 2: Connector location (all dimensions are in mm)

the BIOS options of your computer system to Auto Detection and LBA mode if available. Once the drive is recognized correctly in the BIOS, it is ready to be partitioned and formatted.

- Your operating system setup utility will provide instructions on how to partition and format your drive before it installs the operating system.

For additional information see: [www.hitachigst.com/support](http://www.hitachigst.com/support)

The recommended mounting screw depth is 4 mm maximum for bottom and 4.5 mm maximum for horizontal mounting.

Drive level vibration test and shock test are to be conducted with the drive mounted to the table using the bottom four screws.

## Mounting Recommendations

The drive will operate in all axes (6 directions). Performance and error rate will stay within specification limits if the drive is operated in the other orientations from which it was formatted.

For reliable operation, the drive must be mounted in the system securely enough to prevent excessive motion or vibration of the drive during seek operation or spindle rotation, using appropriate screws or equivalent mounting hardware.

The recommended mounting screw torque is 0.6 - 1.0 Nm (6-10 Kgf.cm).

© 2009 Hitachi Global Storage Technologies

Hitachi Global Storage Technologies  
3403 Yerba Buena Road  
San Jose, CA 95135

Produced in the United States, 8/09. All rights reserved.

Deskstar™ is a trademark of Hitachi Global Storage Technologies.

Hitachi GST trademarks are authorized for use in countries and jurisdictions in which Hitachi has the right to use, market and advertise the brands. Hitachi GST shall not be liable to third parties for unauthorized use of its trademarks.

References in this publication to Hitachi products, programs or services do not imply that Hitachi intends to make these available in all countries in which it operates. Some countries have laws that may affect encryption-enabled devices. Hitachi GST assumes no responsibility for compliance with laws that apply to our products after they are sold or outside of our control. Accordingly, we suggest that you review all laws of the countries where you conduct business.

Product specifications provided are sample specifications and do not constitute a warranty. Information is true as of the date of publication and is subject to change. Actual specifications for unique part numbers may vary. Please visit the Support section of our website, [www.hitachigst.com/support](http://www.hitachigst.com/support), for additional information on product specifications. Photographs may show design models.

4 August 2009