



 
Quick installation guide Ultrastar 2ES SCSI




Models: DCAS-32160
DCAS-34330

Handling precautions

1. *Do not cover the breather hole!* Covering the breather hole may result in loss of data.



 2. *Do not press on the drive!* Do not apply any force to the drive during handling or installation.



3. Always handle the drive with care to prevent damage from shock, vibration, or electrostatic discharge (ESD).
4. Do not open the static-protective bag containing the drive until required. Static electricity can damage the drive.
5. Turn off and unplug your computer before removing the case.
6. When you are installing the drive, touch the static-protective package containing the drive to a grounded, unpainted metal surface for at least two seconds. (This drains static electricity from the package and from your body.)
7. Handle the drive carefully by the edges. Do not touch any exposed printed circuit board.
8. Save your drive packaging materials including the ESD bag in the event that the drive must be returned. Place the drive in an anti-static bag before placing it in the shipping container. The warranty will be void if the drive is not returned in IBM approved packaging.


Installation procedure

It is advisable to backup all data before proceeding with the installation.


This procedure may require the use of a bootable System Diskette containing FDISK.COM and FORMAT.COM

Setting the address

1. Each drive on the SCSI bus must have a unique address. Fifty pin (narrow SCSI) devices have 8 possible addresses with address 7 (highest priority) normally reserved for the controller. Sixty-eight pin (wide SCSI) devices have 16 possible addresses (0-15).
2. Jumper positions 4 (68 & 80 pin only), 3, 2, and 1 of the 12 position Option Jumper Block are used to select the SCSI device ID. The shipping default is ID 6 (jumper positions 3 and 2).

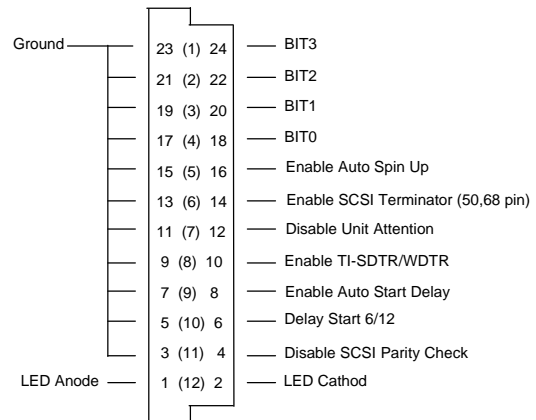

Note: JP1 is reserved on the 50-pin models

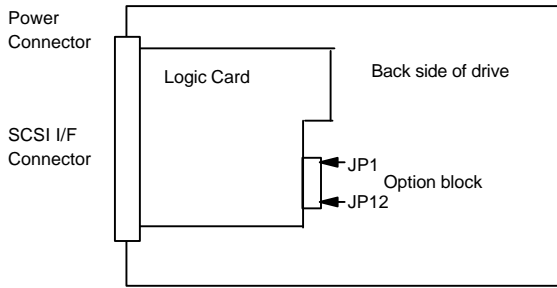

Note: In the table below, "off" means a jumper is not in place and "on" means a jumper is in place.

Bit 3	Bit 2	Bit 1	Bit 0	Address
off	off	off	off	0
off	off	off	on	1
off	off	on	off	2
off	off	on	on	3
off	on	off	off	4
off	on	off	on	5
off	on	on	off	6*
off	on	on	on	7
on	off	off	off	8
on	off	off	on	9
on	off	on	off	10
on	off	on	on	11
on	on	off	off	12
on	on	off	on	13
on	on	on	off	14
on	on	on	on	15

* Shipping Default

Attaching the drive

1. Turn off the computer, unplug the power cord, and open the case.
2. The DCAS drive requires Active Termination on both ends of the SCSI cable (the SCSI controller normally provides internal termination for one end of the cable). If the DCAS drive is the only device on the SCSI cable, attach it to the end of the 68 pin cable furthest from the controller and enable termination by placing a jumper on position 6 of the Option Jumper Block. If the drive is attached to a cable that contains other devices and the new drive is not attached to the end of the cable, jumper position 6 must be open and Active Termination must be supplied by the device at the end of the cable.
3. Select the other option jumpers as required by your computer.
4. Attach the power connector.

Mounting the drive

1. Mount the drive securely, using the appropriate brackets or rails, in any axes, using four 6-32 UNC metric screws in the bottom or side mounting holes.

2. The maximum screw insertion depth for bottom mounting is 6.0 mm (.23 in) and for side mounting is 3.5 mm (.14 in).

Configuring your Computer

1. Plug in the power cord and power on your computer. Consult your SCSI adapter users guide for information on configuring a new hard disk drive.
2. Follow the Operating System instructions to format and partition your drive.

If your system will not boot up after complete installation, recheck all settings. If the system still fails to boot up, remove the new drive to return the system to its original configuration and call the IBM Hard Disk Drive Technical Support Center.



© International Business Machines Corporation 1999

www.ibm.com/harddrive

IBM Hard Disk Drive Technical Support Center

Dept. D8M
3605 Highway 52 North
Rochester, MN 55901
Telephone: 888.IBM.5214 or 507.286.5825
Fax: 507.253.DRIVE
E-mail: drive@us.ibm.com

Singapore Technical Support Center

Telephone: 1800.418.9595 or 65.6.418.9595
E-mail: drive@sg.ibm.com

IBM Systems Storage Division

5600 Cottle Road
San Jose, CA 95193
www.ibm.com/storage

Asia-Pacific Headquarters: 65.320.1234
European Headquarters: 44.01.705.561.871
Japan Sales Branch Office: 81.46645.1039

Printed in the United States of America
01-99

All Rights Reserved

IBM is the registered trademark of International Business Machines Corporation.

Other company, product, and service names may be trademarks or service marks of others.

Produced by the IBM Hard Disk Drive Technical Support Center.

OEM Hard Disk Drive Specifications for DCAS-34330 / DCAS-32160 (Revision 1.2)

Product Description data represents IBM's design objectives and is provided for comparative purposes; actual results may vary based on a variety of factors. This product data does not constitute a warranty. Questions regarding IBM's warranty terms or methodology used to derive this data should be referred to the IBM Hard Disk Drive Technical Support Center. Data subject to change without notice.

Date: 13 January 1999