

Hitachi Global Storage Technologies

Quick installation guide Hitachi Travelstar 60GH & 40GN 2.5 inch ATA/IDE hard disk drive Enhanced Availability models



Models: IC25T060ATCX05
IC25N040ATCX04
IC25N030ATCX04
IC25N020ATCX04
IC25N010ATCX04

Handling precautions

- Wear a grounded wrist strap while handling the drive to prevent damage from Electrostatic Discharge (ESD).
- Set the drive down gently to prevent damage from impact or vibration.
- Do not open the ESD bag containing the drive until needed.
- Handle the drive carefully by the edges. Do not touch the exposed printed circuit board or any electronic components.
- Do not press on the top or bottom of the drive.
- Do not cover the drive's breather hole.

Quick installation


Installation of this Hitachi Travelstar drive in some notebooks may require use of unique hardware (such as mounting trays, connecting cable, insulating material). If you are uncertain if hardware is needed, consult your notebook manufacturer as this operation may require a qualified technician.

Back up all data before proceeding with installation.

1. Set the jumpers

- **Master drive.** No jumper is required if the drive is the only drive in a system or the Master drive in a two-drive system.
- **Slave drive.** If this is the Slave drive in a system, place a jumper in setting A2. (See the A2 setting in the illustration.)
- **Cable Select.** Setting A3 in the illustration. Consult the system manual to see if your computer supports Cable Select.

Jumper settings

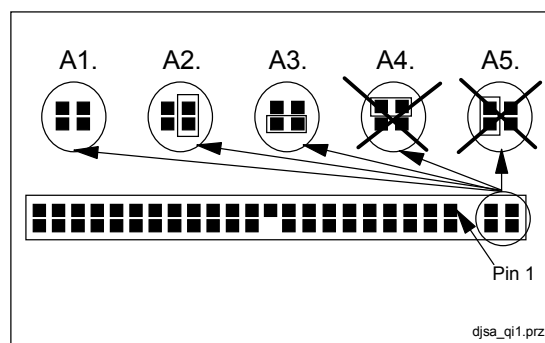

A1. Master A2. Slave A3. Cable Select
A4 & A5. Never attach a jumper in these positions!

2. Attach the drive

For assistance on the physical installation of the drive, consult your system manual.

3. Configure the computer

1. Turn on the computer.
2. Enter Setup.
3. Go to Hard Disk Drive Configuration.
4. Select Autodetect if it is available.
5. If Autodetect is not available, set to User and set to appropriate parameters from the table below.
6. Save the settings.
7. Exit.
8. Reboot the system from a floppy disk.

Model Number	Cylinders	Heads	Sectors/Track	Capacity (GB)
IC25T060ATCX05	16,383	8	63	60
IC25N040ATCX04	16,383	4	63	40

IC25N030ATCX04	16,383	3	63	30
IC25N020ATCX04	16,383	2	63	20
IC25N010ATCX04	16,383	2	63	10

4. Partition and format

For instructions on how to Partition and Format your drive, see the 'Partitioning and Formatting Reference Guide' at <http://www.hgst.com/support>

5. Boot up the computer

If the system does not boot up after the installation of the drive, check all the settings. If the system still fails to boot up, contact the Hitachi Global Storage Technologies Support Center.

© Copyright Hitachi Global Storage Technologies

Hitachi Global Storage Technologies
5600 Cottle Road
San Jose, CA 95193

Produced in the United States

6/03

All rights reserved Deskstar™ is a trademark of Hitachi Global Storage Technologies.

Microsoft, Windows XP, and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other product names are trademarks or registered trademarks of their respective companies.

References in this publication to Hitachi Global Storage Technologies products, programs or services do not imply that Hitachi Global Storage Technologies intends to make these available in all countries in which Hitachi Global Storage Technologies operates.

Product information is provided for information purposes only and does not constitute a warranty.

Information is true as of the date of publication and is subject to change. Actual results may vary.

This publication is for general guidance only. Photographs may show design models.

17 June 2003
