




Quick installation guide

Deskstar 16GP


AT/IDE

Models: DTTA-350320, 350430, 350640
 DTTA-350840, 351010, 351290
 DTTA-351680

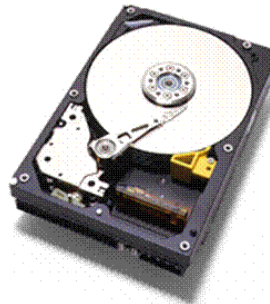


Handling precautions

1. *Do not cover the breather hole!* Covering the breather hole may result in loss of data.



2. *Do not press on the drive!* Do not apply any force to the drive during handling or installation.



3. Always handle the drive with care to prevent damage from shock, vibration, or electrostatic discharge (ESD).
4. Do not open the static-protective bag containing the drive until required. Static electricity can damage the drive.
5. Turn off and unplug your computer. Remove the cover.
6. When installing the drive, touch a grounded, unpainted metal surface with the static-protective package containing the drive for at least two seconds. (This drains static electricity from the package and from your body.)
7. Handle the drive carefully by the edges. Do not touch any exposed printed circuit board.
8. Save the drive packaging material including the ESD bag in the event that the drive must be returned. Place the drive in an anti-static bag before placing it in the shipping container. The warranty will be void if the drive is not returned in IBM approved packaging.

Quick installation procedure

Note: It is advisable to backup all data before proceeding with the installation.

If your system BIOS cannot handle large capacity drives (due to inadequate address locations, most systems are limited to accessing drives with a capacity of 8.4GB or less), you may need to use a disk overlay program such as Ontrack's Disk Manager. The following procedure uses the Ontrack Disk Manager software. Information on obtaining a copy of Ontrack's Disk Manager can be found on the Web at www.ibm.com/harddrive.

Setting the jumpers


1. Refer to your computer manual to determine if you require the 15- or 16-head logical architecture.
2. In a one drive system, configure your new drive as Master (Device 0)
3. In a two drive system, one drive must be designated as the Master, the other as the Slave (Device 1)
4. When installing the new drive as a Slave, check the Master drive to determine if a jumper change is required to indicate that a Slave drive is present.
5. Consult your manual to see if your computer supports Cable Select before choosing this option.

16 head logical architecture

	Jumper pins
Master	A-B & G-H
Slave	A-B & C-D
Cable Select	A-B & E-F
Slave Present	E-F & G-H

15 head logical architecture

	Jumper pins
Master	A-C & G-H
Slave	A-C
Cable Select	A-C & E-F
Slave Present	A-C, E-F & G-H



Attaching the drive

1. Turn off the computer, unplug the power cord, and open the case.
2. Match pin 1 of the 40-pin cable to pin 1 of the drive interface connector. Pin 1 is usually denoted by a stripe along the edge of the cable.
3. Insert a power plug in either the 3- or 4-pin power connector.

Mounting the Drive

1. Mount the drive securely, using the appropriate brackets or rails, in any axes, using four 6-32 UNC metric screws in either bottom or side mounting holes.
2. The maximum screw insertion depth for the bottom mounting is 4 mm and for side mounting 4.5 mm.

Configuring your computer

1. If your computer has a plug-in IDE card with a drive installation procedure, follow the manufacturer's instructions.
2. Plug in the power cord and power on your computer. Your computer may detect a configuration change and prompt you to proceed to the Setup screen. If so, proceed to step 4.
3. If your computer does not prompt you to reconfigure, enter your computer's Setup, typically by key selection or keyboard combinations during power-on or during a reboot. Refer to your computer's documentation for the proper key sequence. If the computer fails to boot up, power off, remove the new hard drive and reconfigure your system to its original configuration. Reboot and enter your computer's Setup. Follow the directions in step 4, then reattach the new hard drive.
4. Select "Auto Detect" if your computer Setup supports this feature. If your computer does not Auto Detect the drive, select the appropriate UDT (User Definable Type) for the model being installed. Then run Disk Manager.

IBM model number	Cylinder	Heads	Sector /Track	Cap.
DTTA-351680	16,383	15	63	16.9GB
DTTA-351290	16,383	15	63	12.9GB
DTTA-351010	16,383	15	63	10.1GB
DTTA-350840	16,383	16/15	63	8.4GB
DTTA-350640	13,431	15	63	6.4GB
DTTA-350430	8,960	15	63	4.3GB
DTTA-350320	6296/ 6715	16/15	63	3.2GB

Running Disk Manager

1. Insert the Ontrack diskette and reboot your computer.
2. Type DM and press [ENTER] to run Disk Manager.
3. Under "Select an Installation Option", select (E)asy Disk Installation.
4. Select a drive for installation; Disk Manager will partition and format the drive.

5. A status dialog will indicate a successful installation.

If, after complete installation, your system will not boot up, recheck all settings. If it still will not boot up, remove the new drive to return to your original configuration and contact technical support.



© International Business Machines Corporation 2002

www.ibm.com/harddrive

IBM Hard Disk Drive Technical Support Center

Dept. D8M
3605 Highway 52 North
Rochester, MN 55901
Telephone: 888.IBM.5214 or 507.253.4110
Fax: 507.253.3748
E-mail: drive@us.ibm.com

Singapore Technical Support Center

Telephone: 65.840.9292
E-mail: drive@sg.ibm.com

IBM Systems Storage Division

5600 Cottle Road
San Jose, CA 95193
www.ibm.com/storage

Asia-Pacific Headquarters: 65.320.1234
European Headquarters: 44.01.705.561.871
Japan Sales Branch Office: 81.46645.1039

Printed in the United States of America

01-99

All Rights Reserved

IBM is the registered trademark of International Business Machines Corporation.

Other company, product, and service names may be trademarks or service marks of others.

Produced by the IBM Hard Disk Drive Technical Support Center.

OEM Hard Disk Drive Specifications for DTTA-3xxxxx, revision 2.0

Product Description data represents IBM's design objectives and is provided for comparative purposes; actual results may vary based on a variety of factors. This product data does not constitute a warranty. Questions regarding IBM's warranty terms or methodology used to derive this data should be referred to the IBM Hard Disk Drive Technical Support Center. Data subject to change without notice.

Date: 26 November 2002